



# Privacy Lever Set Installation Guide

What you'll need

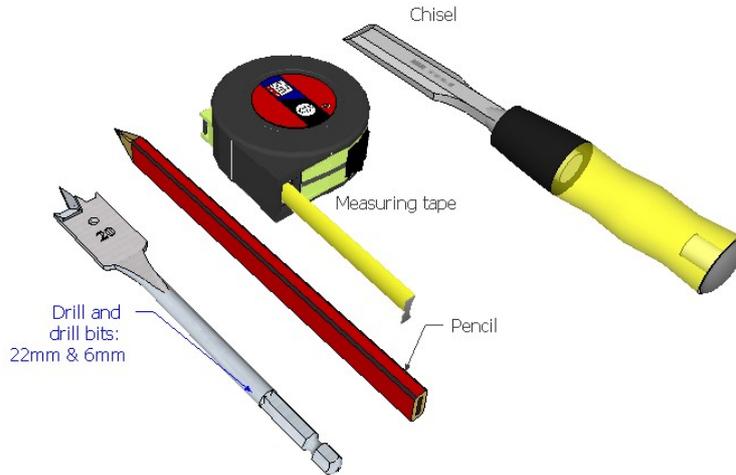


## Step 1 Prepare Door

Determine the height of your door handle based on your preference (normally between 900mm and 1000mm). At this height, measure **60mm** (2 3/8") from the edge of the door and mark the door with a pencil. Repeat this on the opposite side of the door.

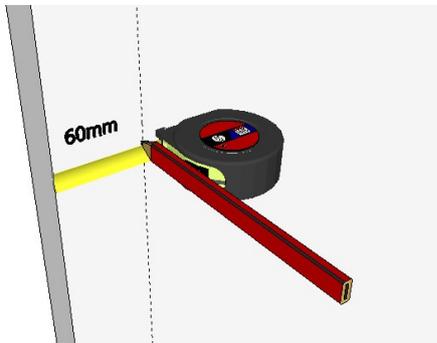


## Step 6

Fit and screw in the tube latch into the door and insert the spindle through the large hole in the door. Fit the striker plate and dustbox (plastic component) into the door frame and screw in place.

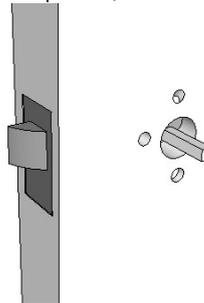


## Step 2

Using a **22mm** (7/8") drill bit, drill a hole at the location you have marked. Take care to drill straight, so the hole is in the correct location on the opposite side of the door too. It is recommended to drill half way through the door from one side, then continue drilling on the other side of the door to ensure the hole is level.

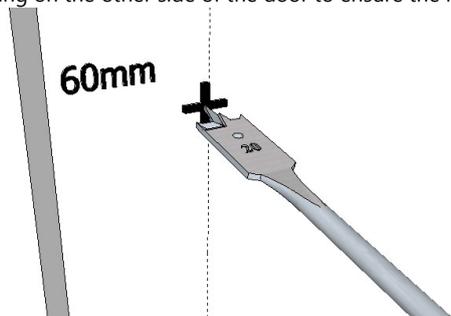

## Step 7


Now attach the inner rose to each side of the door. You will need to cut the screws pictured below based on the thickness of your door. A pair of pliers is sufficient to cut these screws. These screws go through the top and bottom holes in the rose.

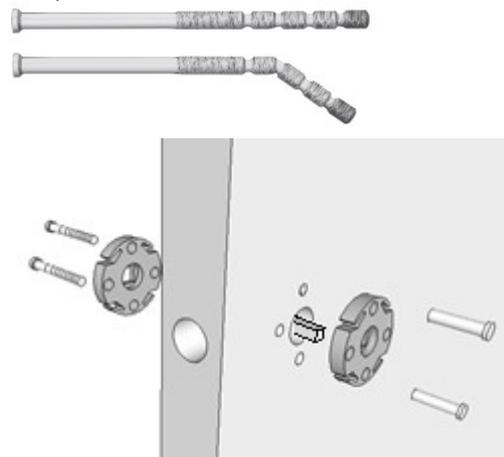

# Privacy Lever Set Installation Guide


## Step 3

Using the specific measurements provided with these instructions, mark, then drill using a **6mm** (1/4") drill bit, the other 3 holes required.

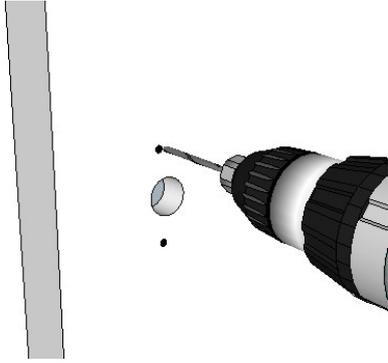


## Step 8

Fit the handle components, the outer rose, plastic washer, and then the handle itself. Ensure the outer rose has the small hole for the privacy latch, closest to the edge of the door (to the left in the image below).

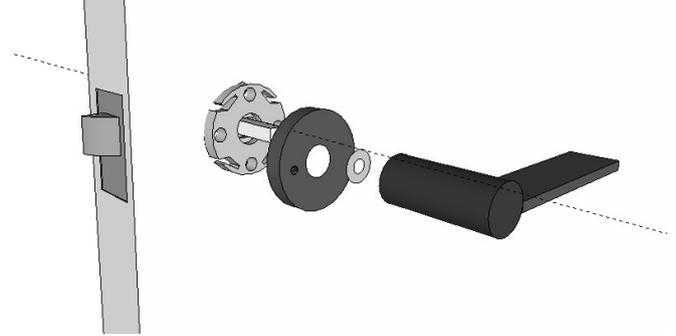


## Step 4

Drill a **22mm** (7/8") hole in the end of the door as per the specific measurements which come with these instructions. This will house the tubelatch.

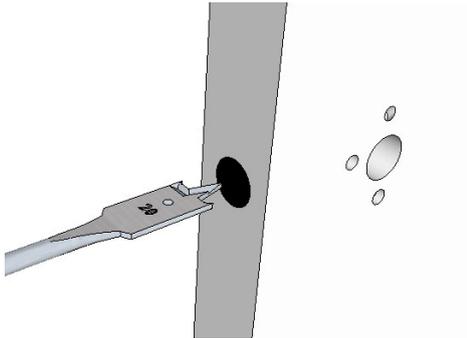


## Step 9

Using the allen key provided, screw the allen key screw into the hole on the underside of the handle. This will keep the handle in place. Repeat on the other side of the door.

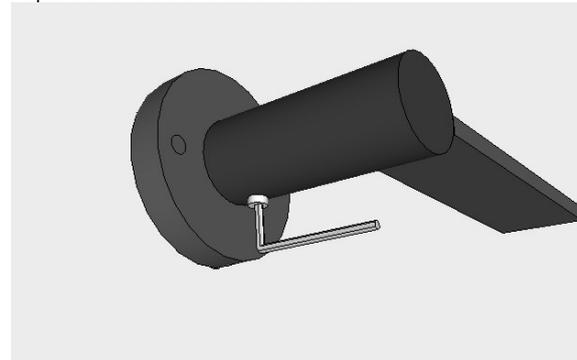


## Step 5

Chisel out the hole where the tube latch sits using the measurements at the bottom of these instructions. Then, chisel out the striker plate on the door frame, using the striker plate itself as the template to draw around.

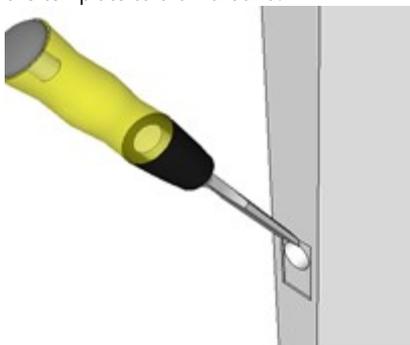


## Step 10

Screw the privacy latch through the hole in the outer rose into the tube latch.

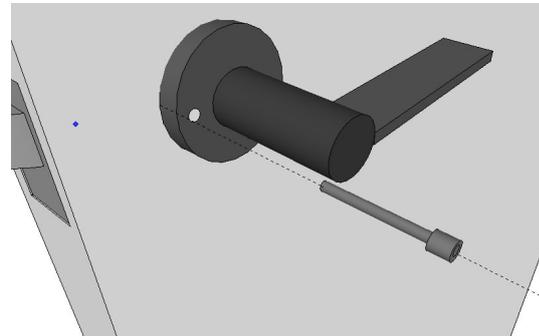

# Privacy Lever Set Installation Guide

## Drilling template

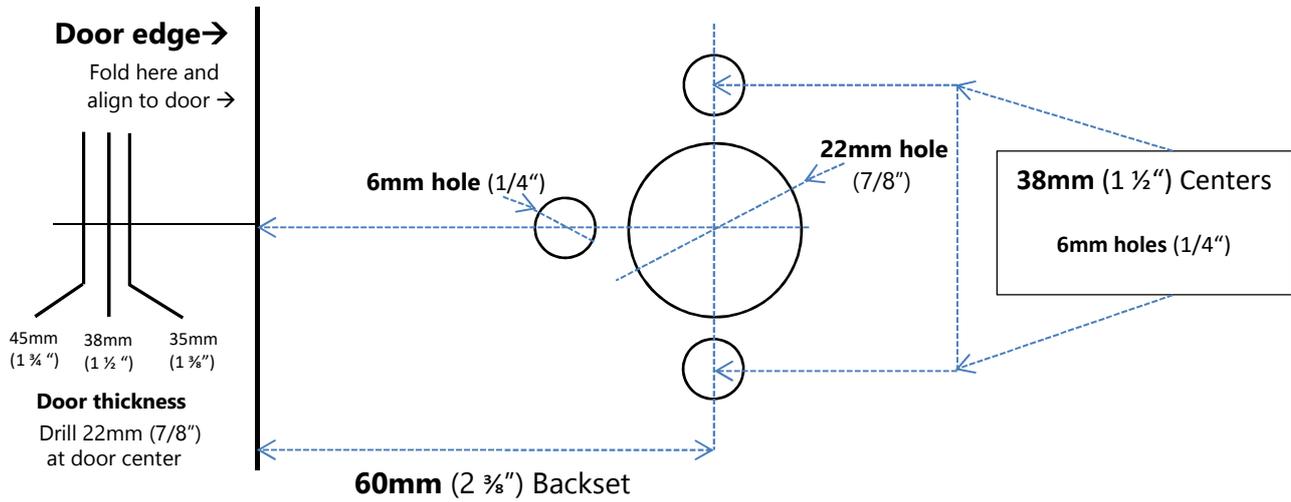

**Tubelatch** (to chisel out. Below diagram not to scale)

